

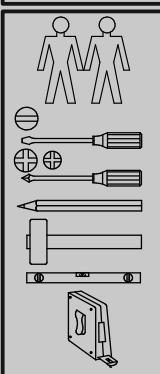


MIROMARK
ФАБРИКА МЕБЛІВ

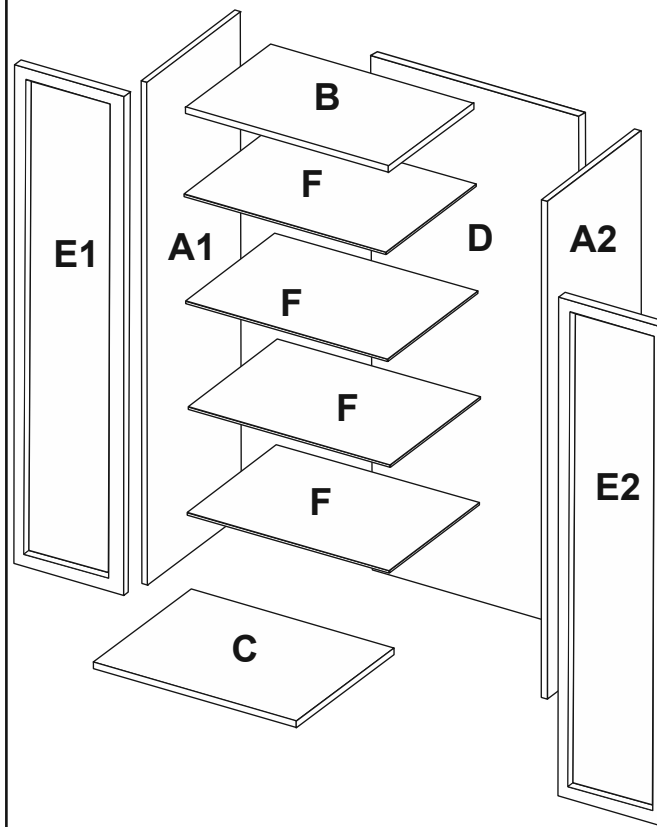

80П 2дв 2140мм
32-ІЗ-231

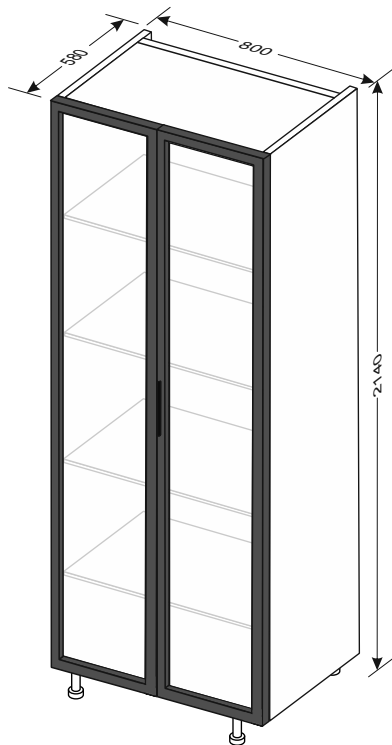


A1	-	2024	x	560	x	16	-	x	1
A2	-	2024	x	560	x	16	-	x	1
B	-	767	x	494	x	16	-	x	1
C	-	800	x	560	x	16	-	x	1
D	-	2024	x	767	x	16	-	x	1
E1	-	2035	x	396	x	20	-	x	1
E2	-	2035	x	396	x	20	-	x	1
F	-	765	x	484	x	6	-	x	4

① x1 72017	② 35mm x10 57602	③ Ø 4x16 x 10416	④ Ø 4x10 x20 10410	⑤ x12 11002	⑥ Ø6,4x50 x4 07650	⑦ Ø 8x30 x20 21008
⑧ Ø 4x10 x2 80883	⑨ x4 14023	⑩ 6.3x13 x20 10613	⑪ x1 07001	⑫ x16 16038	⑬ x12 11016	⑭ x4 01001



1

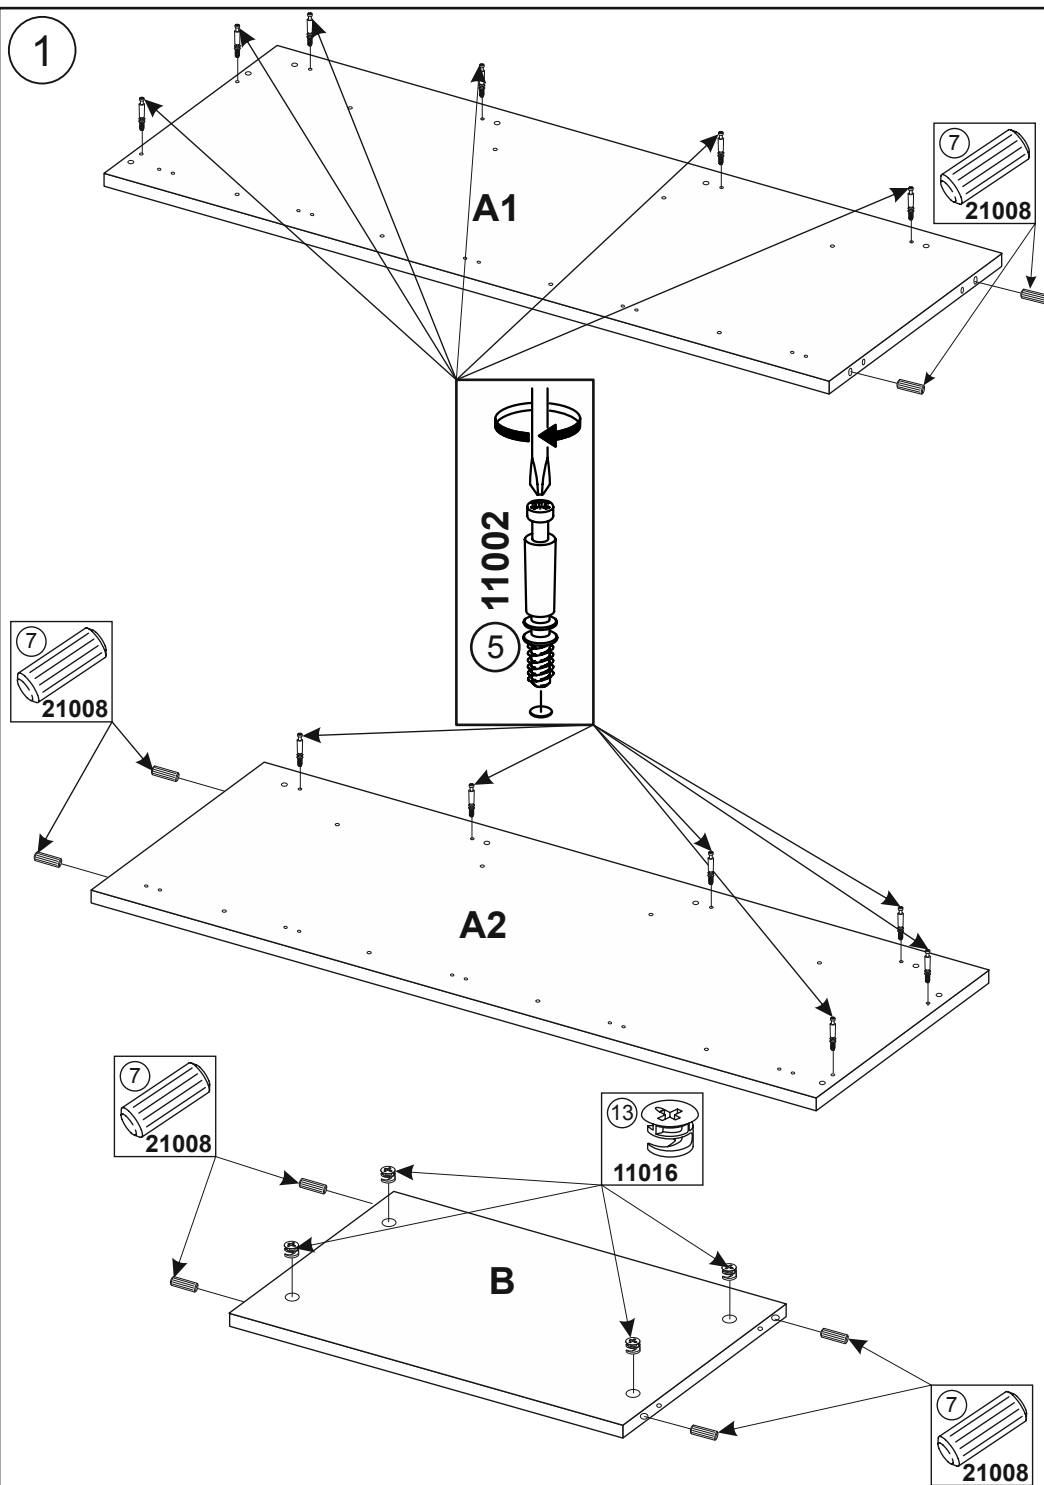

2

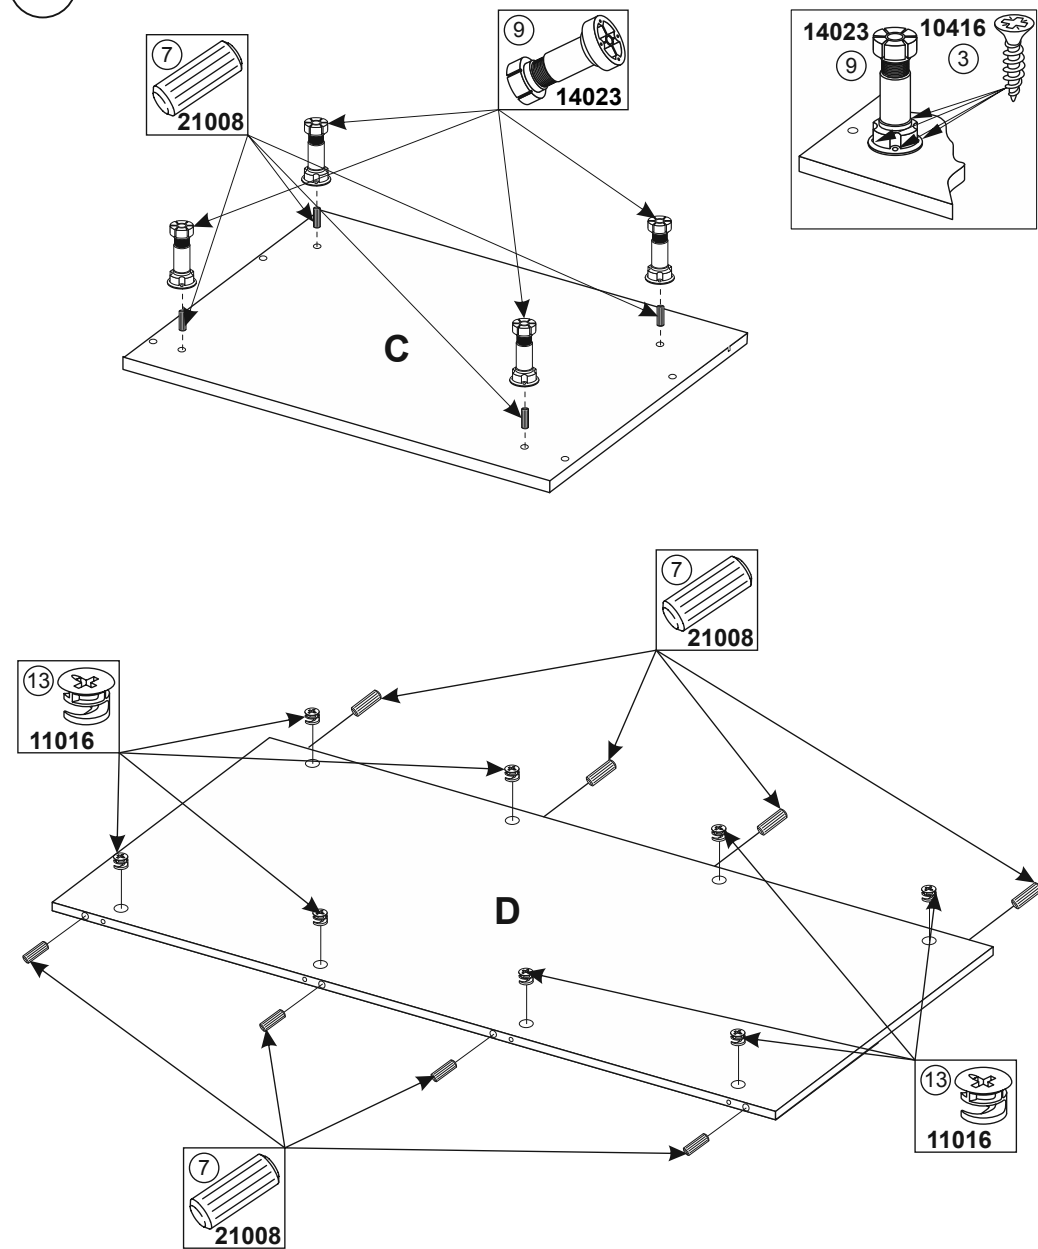



Diagram 3 illustrates the assembly of the second side panel (A2) and the second divider (D). The side panel A2 is shown being lowered into place, guided by arrows. The divider D is then attached to the side panel A2 using screws (13) and a screwdriver (11016). The diagram shows the divider D being positioned against the side panel A2, with arrows indicating the direction of movement. A 90° rotation arrow is shown at the bottom right, indicating the final orientation of the divider D.

4


3

The diagram illustrates the fourth step of assembling a wooden cabinet. It shows a perspective view of the cabinet's back and side panels. The back panel is labeled **A2** and the side panel is labeled **A1**. The top panel is labeled **D**. The assembly is being completed by attaching the back panel to the side panel. Four screws, labeled **07001** and circled with the number **11**, are shown being inserted into the back panel. A dowel, labeled **07650** and circled with the number **6**, is shown being inserted into the side panel. Arrows indicate the direction of assembly. The diagram is labeled with a circled **4** in the top left corner and a boxed **3** in the top right corner.

5

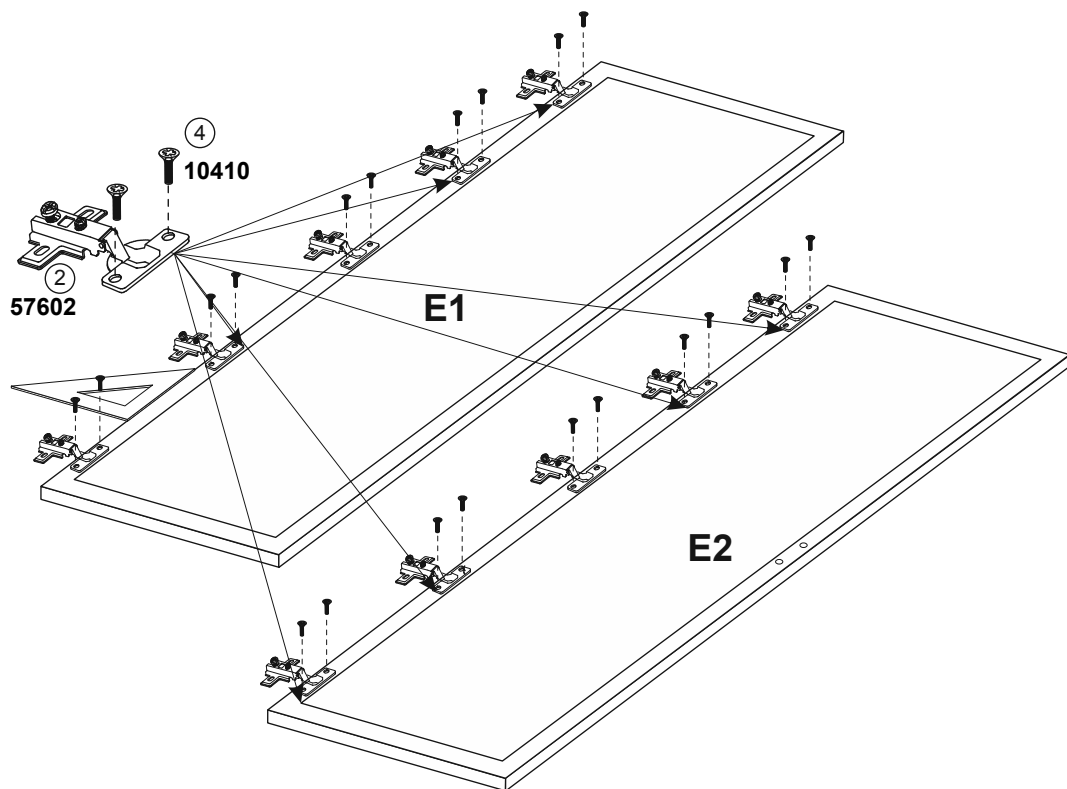


6

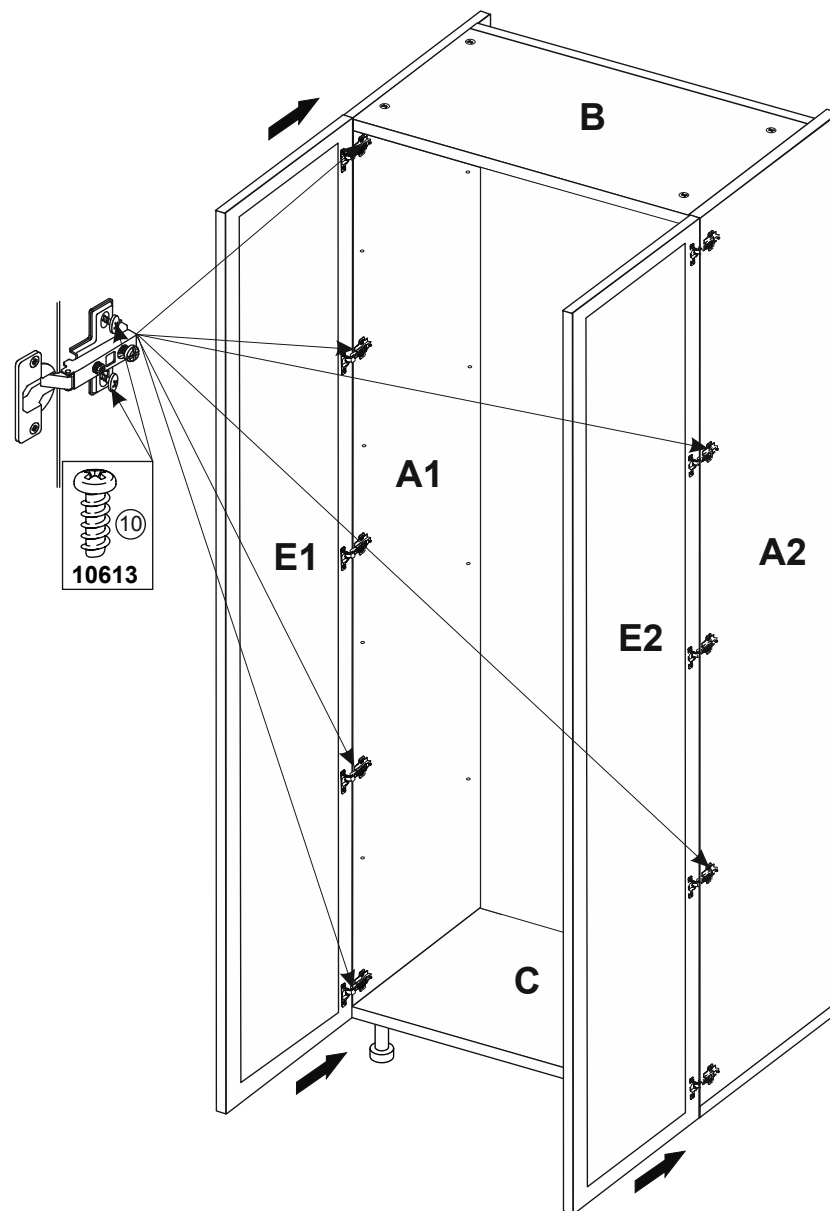


4

7

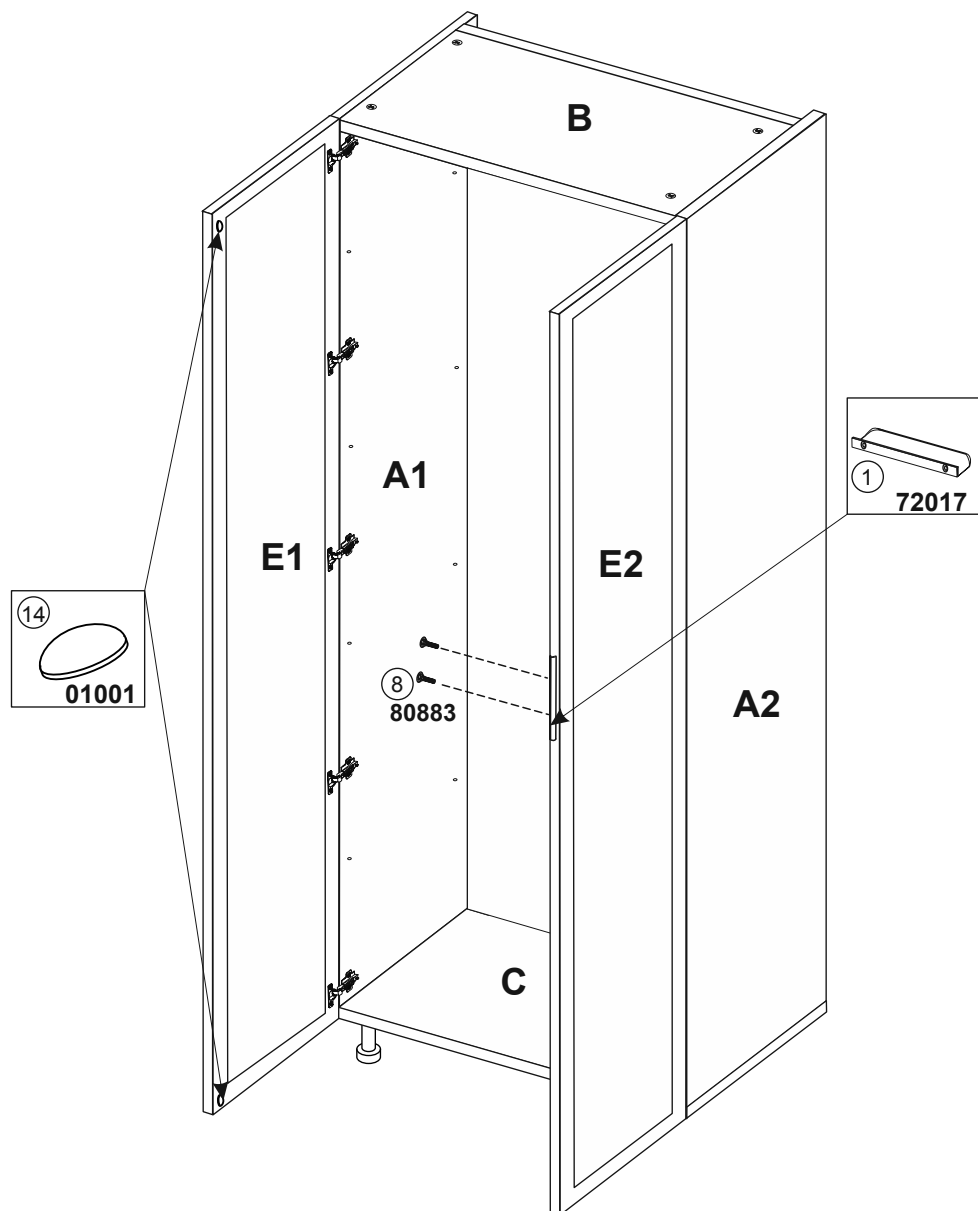


8

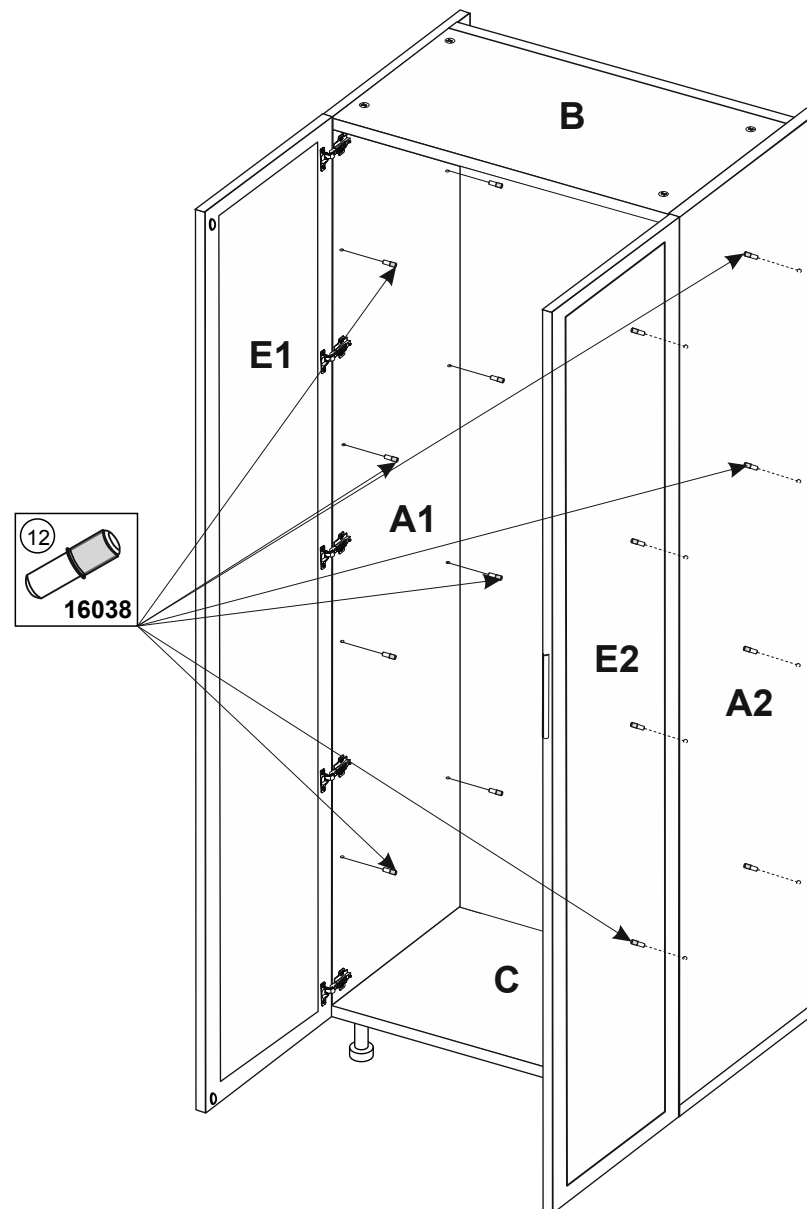

5

9

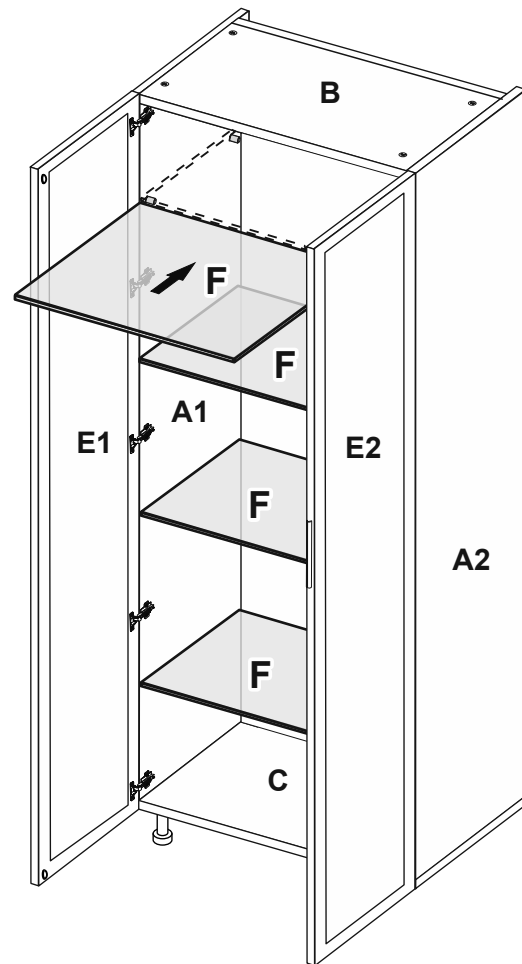

10

6

